


# KETCH-ALL POLE INSTRUCTIONS


## Please Note:

The Ketch-All pole is designed to safely coax animals to safety. Using the pole as a weapon is inappropriate and could easily endanger the animal and the animal control officer. It's important to quickly examine the control pole before each use, to make sure that cable and release mechanisms are operating smoothly. Control poles are not for use on cats.

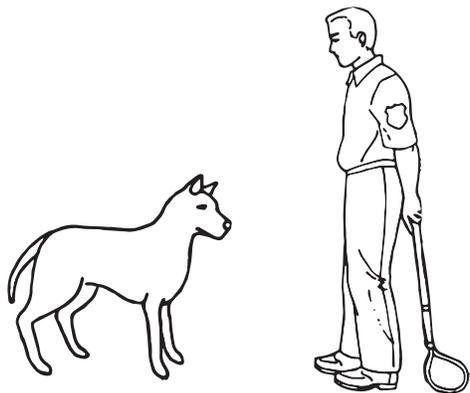


## 1. APPROACHING ANIMAL

Approach the animal slowly, holding the Ketch-All Pole directly behind you or at your side, with the cable loop hanging loosely. **DO NOT** approach animal with a control pole held high, like a weapon, as this will set the tone for the entire encounter

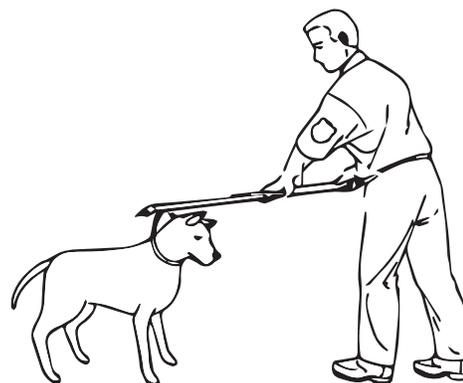

## 2. DEPLOYING POLE

Using both hands, slip the noose smoothly over the animal's head until the loop is around the neck. Use one hand to pull the release cord to tighten the cable until the loop fits snugly, but not too tight. The pole is designed to maneuver the animal not to choke or force an animal into submission.

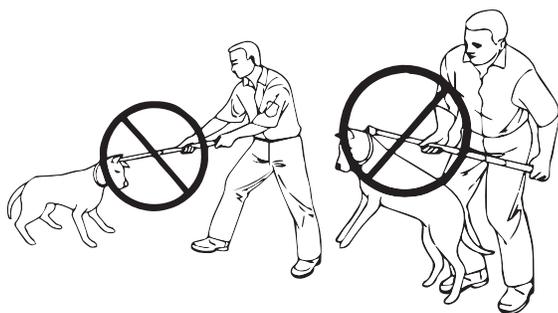

## 3. LEADING THE ANIMAL

Keep both hands a slight distance apart on the pole. Once the loop is secured about the animal's neck, stand beside the animal and slowly guide the animal ahead. Most animals will readily walk forward if you remain in their field of vision, but in some cases walking directly behind them may prompt them to move ahead.



## 4. CONTROL & RELEASE

Never drag, yank, pull, or lift a dog with a control pole, since dogs are often put in a truck for transport, it is a good idea to bring a ramp (a piece of plywood will do) to direct them into a cage. Then, just loosen the cord. While using one hand to carefully close the cage door, use the other hand to remove the control pole with the other.

Be sure the loop retains a rounded shape rather than a teardrop shape by storing the pole on a flat surface or using broom clips. Replace cables every 18-24 months as a part of regular maintenance.



# KETCH-ALL POLES MAINTENANCE

## TO REMOVE CABLE

1. Remove large lock ring 117 located behind collar #8.
2. Pull collar #8 back toward rear of pole until head #9 is exposed.  
**Note:** it may be necessary to slide toothguard #5 back in order to pull collar back.
3. Remove head #9, which is right hand thread, leaving collar #8 on pole.  
**IF APPLICABLE:** remove allen set screw #6 (with alien wrench) located on head.
4. When head #9 is free, pull release knob #1 back and hold in this position (we suggest using vice grips) while pulling cable out through the other end of pole.
5. Pull cable spring from hair guard #23.

## TO INSTALL CABLE

1. Insert ball of cable through hair guard #23 (which should be attached to head shank #9), running cable through until hair guard #23 meets cable spring.
2. Screw hair guard #23 into cable spring. The cable is now ready to install.
3. Insert cable through tubing #3, pulling back on release knob #1 to allow cable to pass through locking device.
4. Screw head onto end of pole.
5. Insert cable ball in groove or track in head #9.
6. Pull collar #8 over head and cable ball, and replace lock ring /fl.  
**IF APPLICABLE:** replace set screw #6

## TO DISASSEMBLE LOCKING DEVICE

1. Pull back on release knob #1, turning it until hole in tubing lines up with hole in cage #20
2. Insert ice pick or nail through holes, thus keeping locking device from turning.
3. Remove release knob #1, which is a right hand thread. There should be a lock washer #16 inside release knob.
4. Remove: lock ring #17, step washer #18, compression spring #19. cage lf1JJ and three ball bearings #21.



# KETCH-ALL POLES MAINTENANCE


TO REPLACE  
HEAD

To remove cable and to install cable above. You will damage about one inch of cable spring when you pull the old head off. This should be cut off to enable you to screw the new hair guard into the part of the spring that remains intact.

## KETCH-ALL PARTS LIST

IMPORTANT:

When ordering parts, please specify length of pole and whether it is a standard or extension pole.

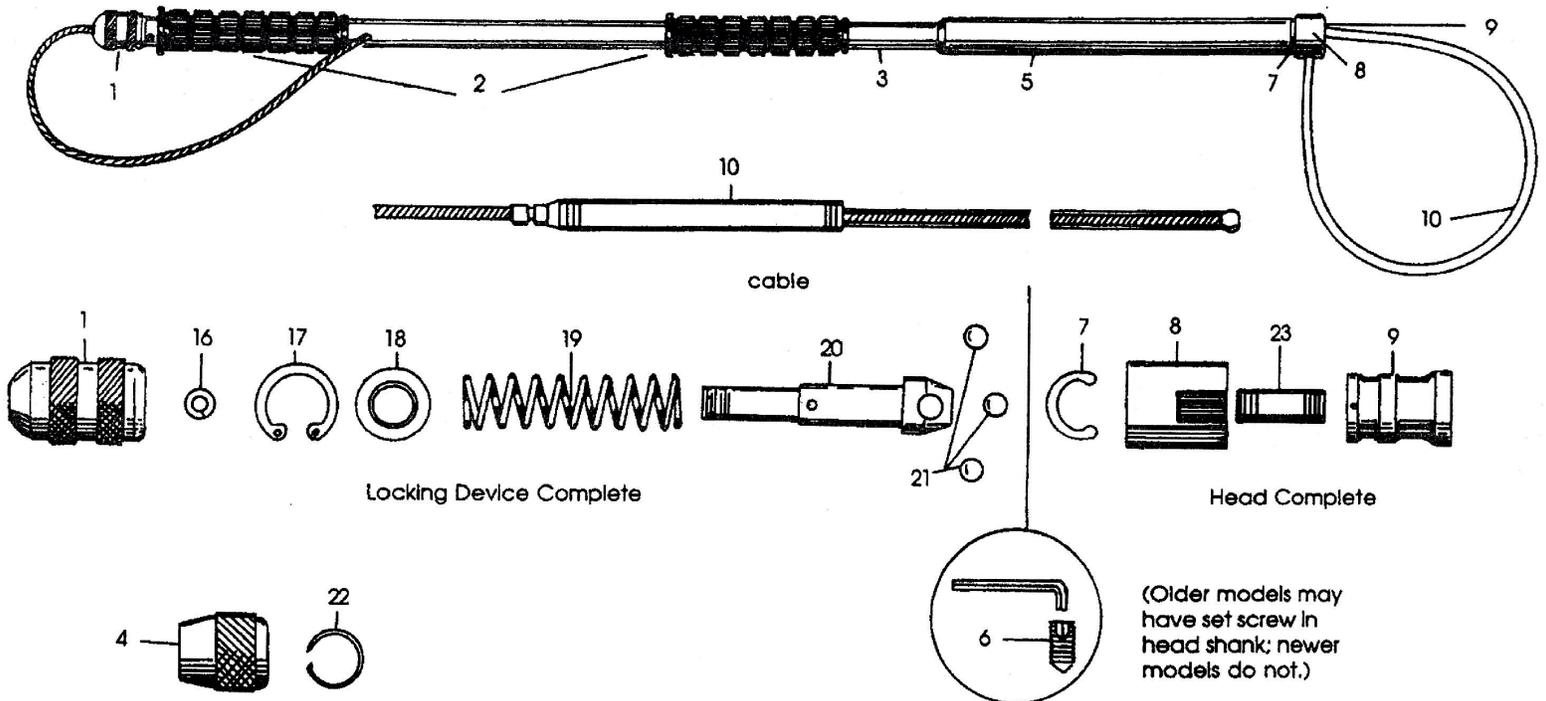

(Chuck #4 and chuck ring #22 used only on extension poles)

- |                                 |                              |                                      |
|---------------------------------|------------------------------|--------------------------------------|
| 1. Release Knob                 | 9. Head                      | 22. Chuck Ring (extension Pole Only) |
| 2. Grips                        | 10. Steel Cable              | 23. Hair Guard                       |
| 3. Tubing                       | 16. Release Knob Lock Washer |                                      |
| 4. Chuck (extension poles only) | 17. Cage Lock Ring           |                                      |
| 5. Toothguard                   | 18. Step Washer              |                                      |
| 6. Allen Set Screw              | 19. Compression Spring       |                                      |
| 7. Head Lock Ring               | 20. Cage                     |                                      |
| 8. Collar                       | 21. 9/32 Ball Bearings       |                                      |

